




INSTALLATION INSTRUCTIONS




A Class 5dr

MB-ACLS-5-B

Parts List

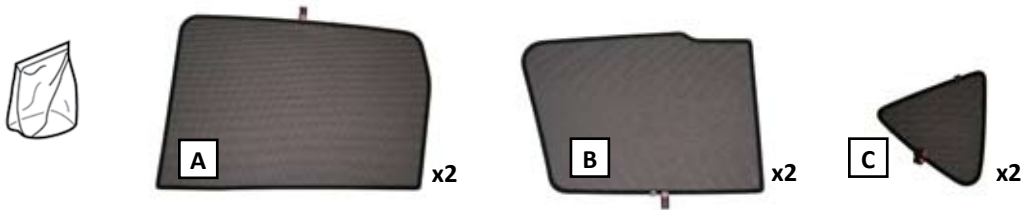

INSTALLATION INSTRUCTIONS - MB-ACLS-5-A

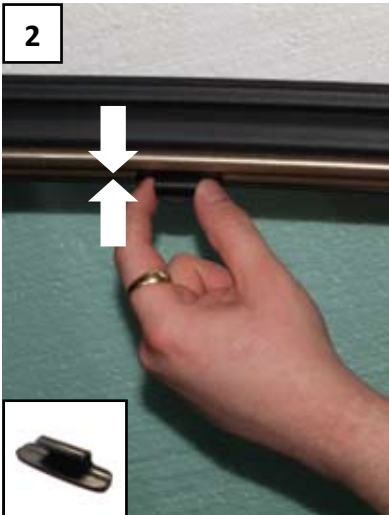

INSTALLATION INSTRUCTIONS - MB-ACLS-5-A

1



2



3



INSTALLATION INSTRUCTIONS - MB-ACLS-5-A

