

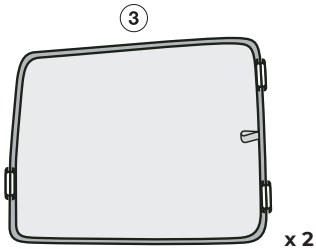


Installation Manual

ALFA ROMEO 156 SPORTWAGON
AR-156-E-A

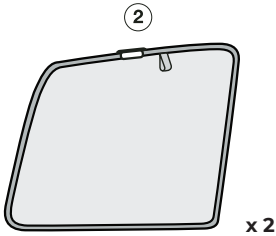

COMPONENTS INCLUDED

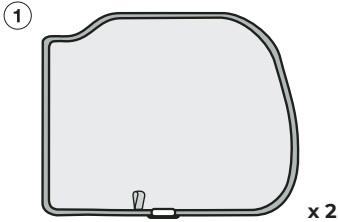

FIXING CLIPS



CL-P01 x 6



CL-P02 x 4



CL-W01 x 1

CAR
SHADES







Installation

ALFA ROMEO 156 SPORTWAGON

AR-156-E-A



SIDE & TAILGATE SHADE INSTALLATION

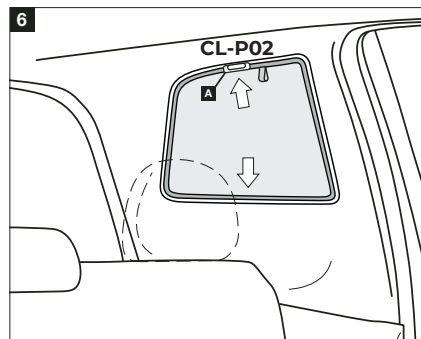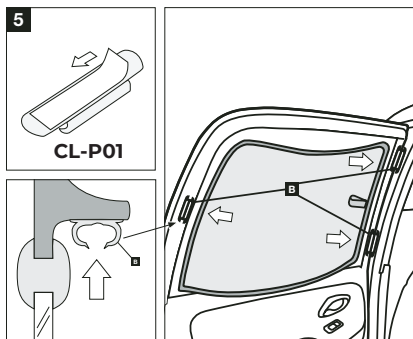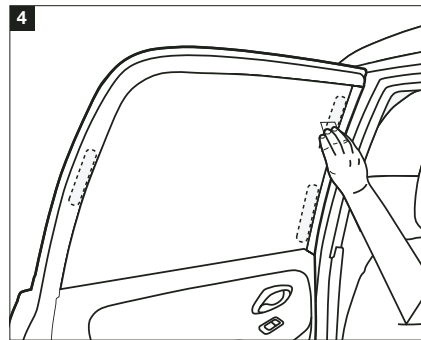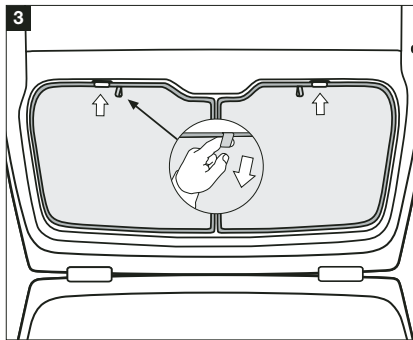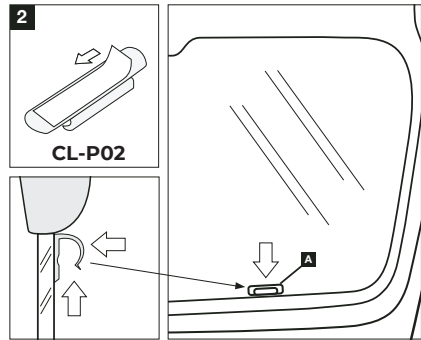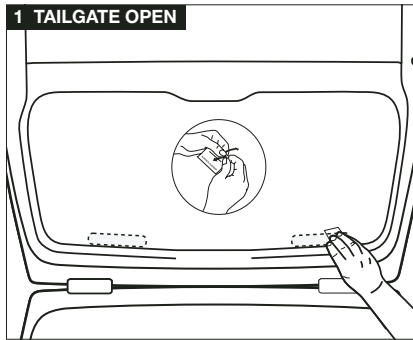

WARNING:

Read these fitting instructions carefully before you start the installation. Rear passenger windows must not be lowered more than 1/3 whilst the blinds are fitted and the vehicle is in motion. On installation care must be taken not to scratch any paintwork with clips.

