


Installation Manual

BMW X1 5DR
BMW-X1-5-B-18



COMPONENTS INCLUDED

SHADES

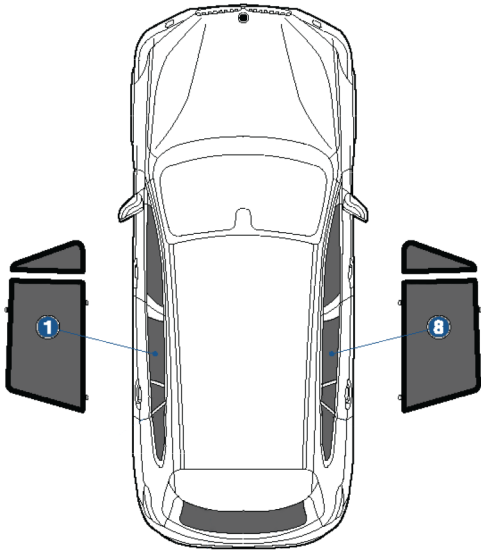

FIXING CLIPS



CL-M03 x 4



CL-M04 x 4




CL-M13 x 2



Side Shade (A) Installation

BMW X1 5DR
BMW-X1-5-B-18

COMPONENTS NEEDED:

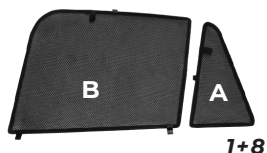

STEP #1

ATTACH CLIPS ON SHADE EDGES



STEP #2

POSITION THE SIDE SHADE



STEP #3

INSERT CLIPS BEHIND INTERIOR TRIM



STEP #4

ENSURE SECURELY FITTED IN PLACE



Side Shade (B) Installation

BMW X1 5DR
BMW-X1-5-B-18

COMPONENTS NEEDED:




CL-M03 x 4



CL-M13 x 2

STEP #1

ATTACH CLIPS ON SHADE EDGES

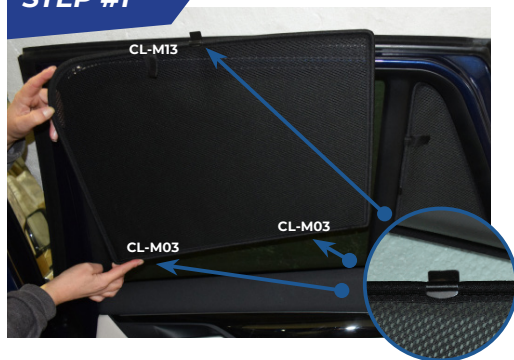

STEP #2

POSITION THE SIDE SHADE



STEP #3

INSERT CLIPS BEHIND INTERIOR TRIM



STEP #4

ENSURE SECURELY FITTED IN PLACE

