


Installation Manual

VOLKSWAGEN TIGUAN 5DR
VW-TIGU-5-B-18



COMPONENTS INCLUDED

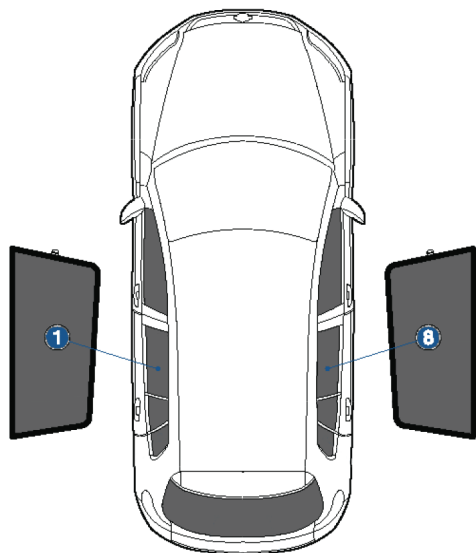

SHADES



1+8

FIXING CLIPS



CL-M11 x 4



CL-T01 x 1

CAR
SHADES

Side Shade Installation

VOLKSWAGEN TIGUAN 5DR
VW-TIGU-5-B-18

COMPONENTS NEEDED:



1+8



CL-M11 x 4


STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP



STEP #2

POSITION THE SIDE SHADE

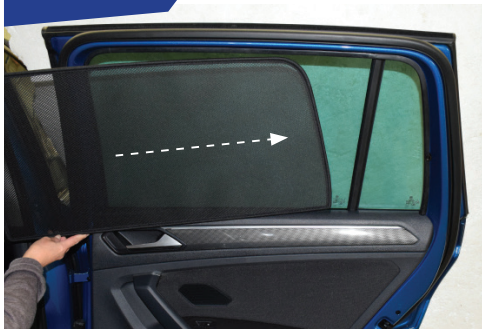


STEP #3

ATTACH SIDE SHADE BEHIND CLIPS



STEP #4

ENSURE SECURELY FITTED IN PLACE

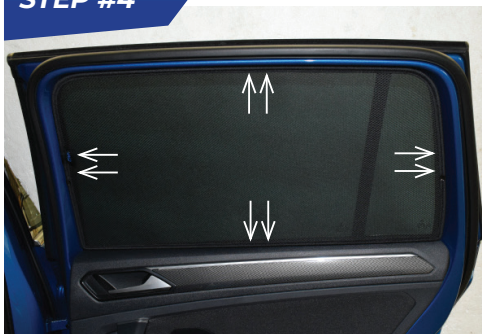

CAR[®]
S H A D E S